



# OilTector<sup>®</sup>

## Quick Start 1 Phase Duplex

# Liberty Pumps<sup>®</sup>

Use the (Installation Example) diagram **1** on the bottom right of page 1 as a reference to match up each component included in this system to the correct terminal blocks inside the control panel **A** shown in diagram **2**. Follow steps **3** through **11** in order.

See note on bottom of this page for steps **6** & **7**.

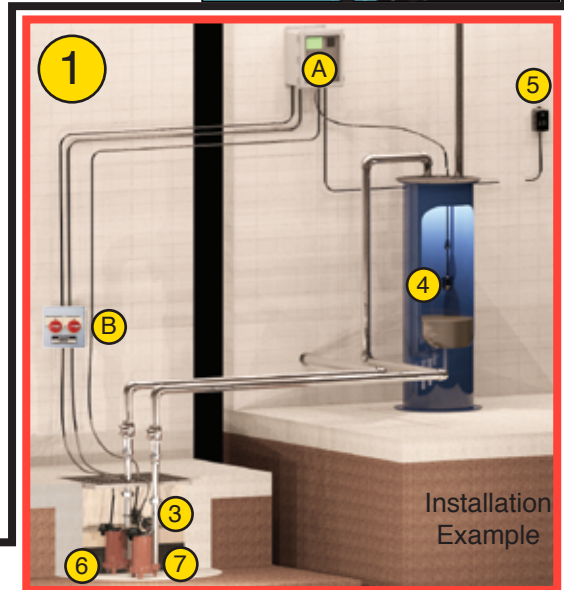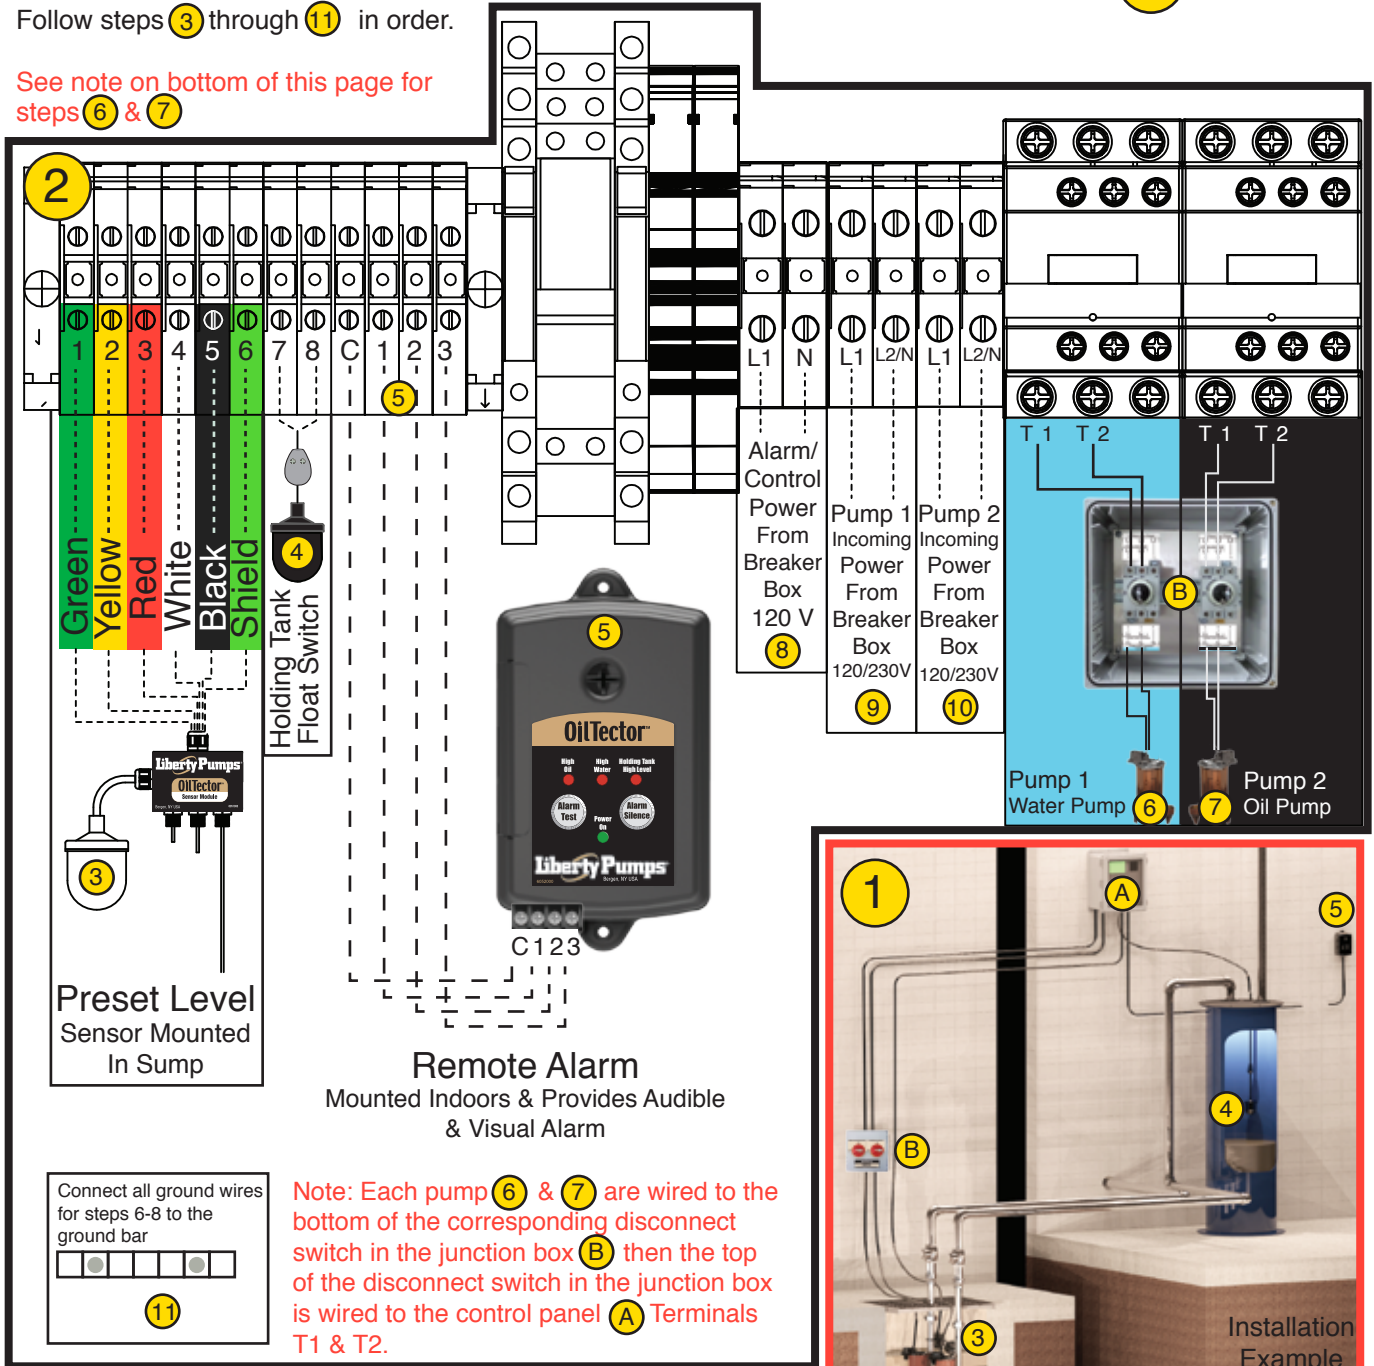

# Liberty Pumps<sup>®</sup>


### QUICK START

**USE PAGE 2 FOR ROUND SHAPED HOLDING TANKS (Follow Steps A-0)**


**USE PAGE 3 FOR RECTANGLE OR SQUARE SHAPED HOLDING TANKS (Follow Steps A-0)**

#### A. Turn On Power To The Control Panel


**B.** Press (Configure Oil Tank)

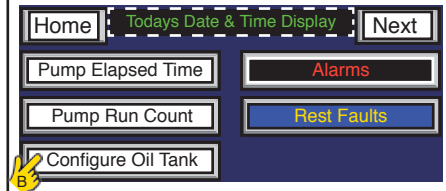


**C.** Press (Enter Pump GPM)

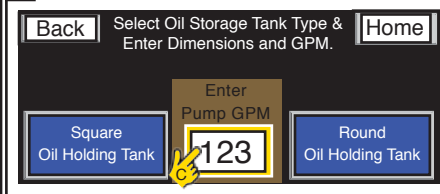


**D1.** Enter Pump Gallons Per Minute From Pump Nameplate.  
**D2.** Press ENT

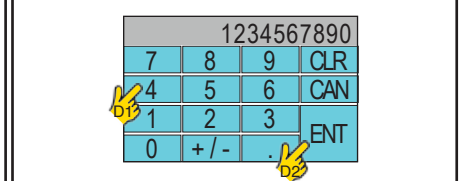


**E1.** Press (Round Tank)

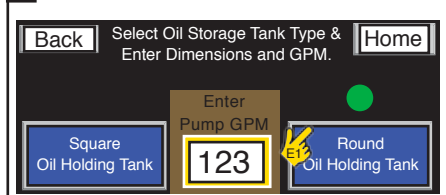


**F1.** Press (Diameter Inches) Button. **F2.** Enter Oil Tank Diameter. Press ENT. Repeat For Depth.

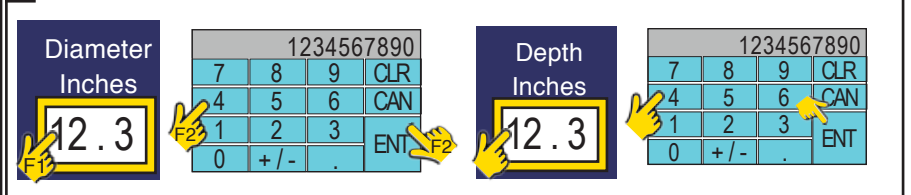


**G1.** Press (Back) Button On Round Tank Screen

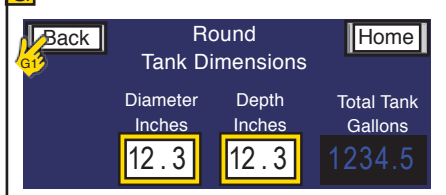


**G2.** Press (Back) On Select Oil Storage Tank Screen

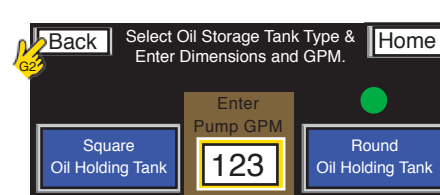

**G3.** Press (Next) On Today's Date Screen

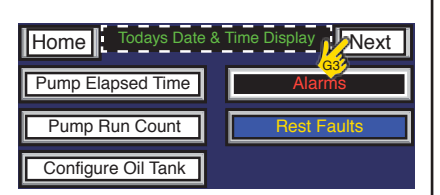


**H.** Press (Maintenance Menu) Button

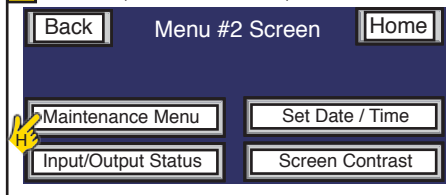


**I1.** Enter Password (1001) as shown below.


- I2. Press Arrow Keys Until 1 Is Highlighted
- I3. Press ENT (1st \* appears)
- I2. Press Arrow Keys Until 0 Is Highlighted
- I3. Press ENT (2nd \* appears)
- I2. Press Arrow Keys Until 0 Is Highlighted
- I3. Press ENT (3rd \* appears)
- I2. Press Arrow Keys Until 1 Is Highlighted
- I3. Press ENT (4th \* appears)
- I2. Press Arrow Keys Until OK Is Highlighted
- I3. Press ENT (You Will Be On Screen)

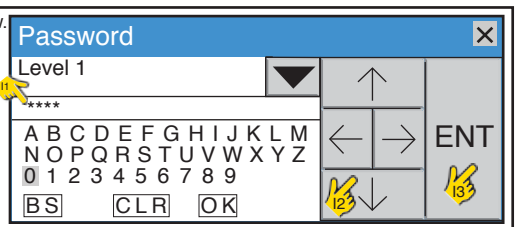


**J.** Press Pump Hand/Auto To Verify Position Of Switches. Note: Off Delay Is Preset To 10 Seconds

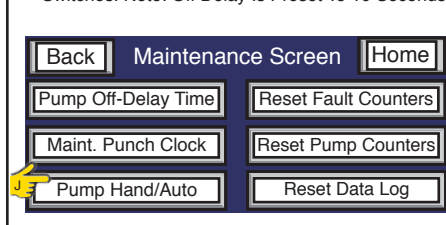

**N1.** Place All Switches In Auto  
**N2.** Press Home Button

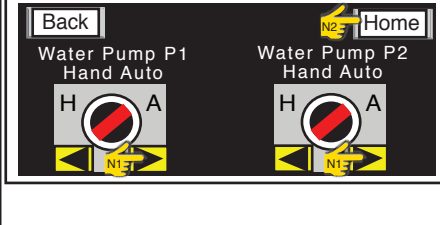

**O.** Place Pump HOA'S into Auto Mode And Do The Bucket Test (See Main Manual For Bucket Test)

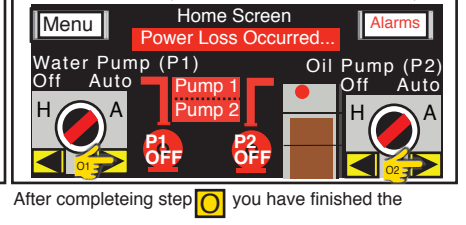


After completing step **O** you have finished the quick start and are on the Home Screen

- Back** Will Always Take You To The Previous Screen
- Home** Will Always Take You To The Home Screen


### QUICK START - FOLLOW STEPS A-O IF USING A SQUARE OR RECTANGLE TANK

#### A. Turn On Power To The Control Panel


#### B. Press (Configure Oil Tank)

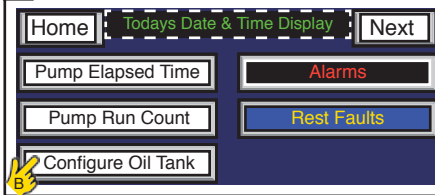


#### C. Press (Enter Pump GPM)

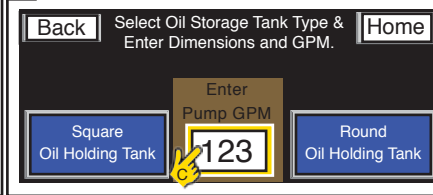


#### D. D1. Enter Pump Gallons Per Minute From Pump Nameplate. D2. Press ENT

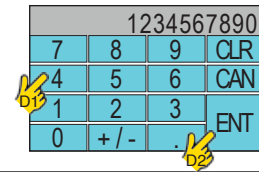


#### E. E1. Press (Square Tank)

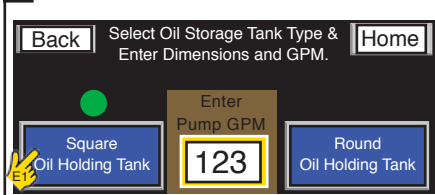


#### F. F1. Press (Length Inches) Button. F2. Enter Length. Press ENT. Repeat For Width & Depth.

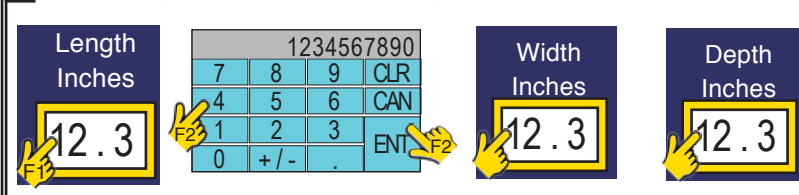


#### G. G1. Press (Back) Button On Square/Rectangle Screen

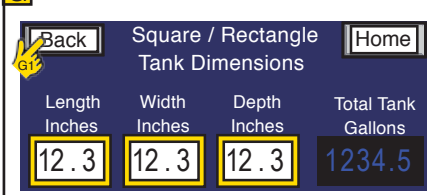


#### G2. Press (Back) On Select Oil Storage Tank Screen

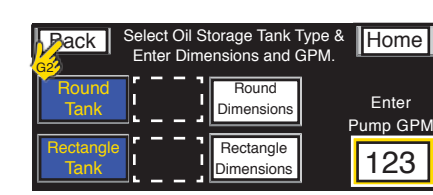


#### G3. Press (Next) On Today's Date Screen

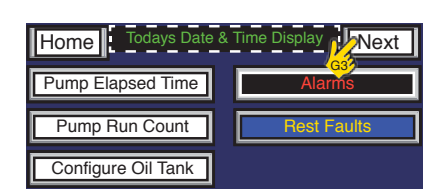


#### H. Press (Maintenance Menu) Button

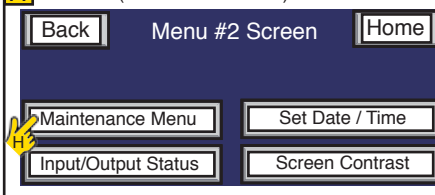


#### I. I1. Enter Password (1001) as shown below.

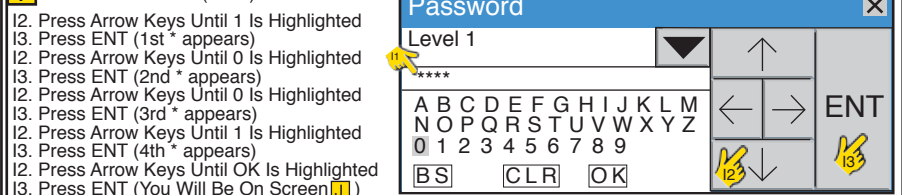


#### J. Press Pump Hand/Auto To Verify Position Of Switches. Note: Off Delay Is Preset To 10 Seconds

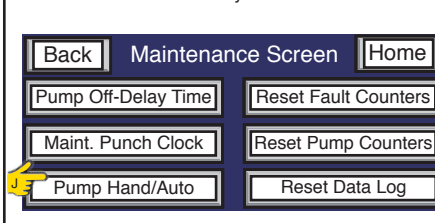

#### N. N1. Place All Switches In Auto N2. Press Home Button

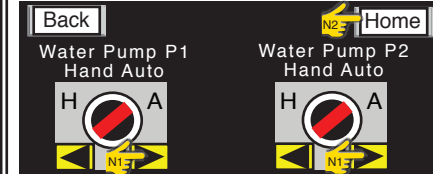

#### O. Place Pump HOA'S into Auto Mode And Do The Bucket Test (See Main Manual For Bucket Test)

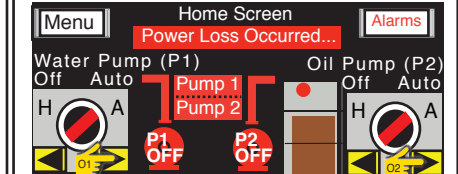

After completing step **O** you have finished the quick start and are on the Home Screen

- Back** Will Always Take You To The Previous Screen
- Home** Will Always Take You To The Home Screen